

BITTEL DELUXE SERIES USER GUIDE


Model Deluxe 5
Deluxe 10



Contents

Location of Controls.....	3
Installation.....	6
Features/Operation.....	7
Programming Memory Keys.....	8

Location of Controls

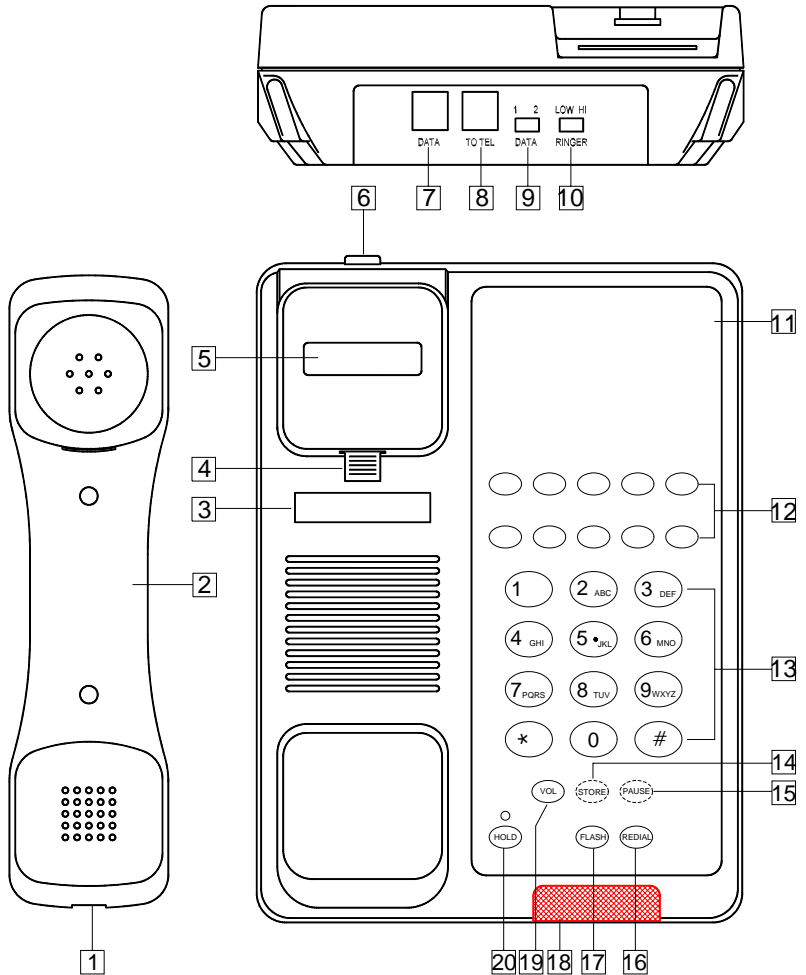

Location of Controls Cont/...2

1. **Handset Jack** – Modular jack to connect coiled handset cord from handset to telephone.
2. **Hearing Aid Compatible Handset**
3. **Position for host phone number**
4. **Handset Wall Mount Clip** – Clip to hold handset on hook in wall mount applications.
5. **Handset Holder** – Use to temporarily hold up the handset without hanging up in wall mount applications
6. **Data Port** – Provides access to telephone line for laptop, fax, or answering machine.
7. **Telephone Jack** – Connect line cord from wall to telephone
8. **Data Port Switch** – Position 1 – Normal. Position 2 – wired to second line, if available.
9. **Ringer Volume** – Adjusts ringer volume to LOW or HI.
10. **Paper and Clear Plastic Faceplate**
11. **Memory Keys*** – Programmable for one touch dialing of frequently used numbers or to add special features.

Location of Controls/Cont...3

12. **Dial Keys** – Keypad for dialing numbers.
13. **FLASH Key** – Enters a 100ms hook switch flash for accessing special telephone system features.
14. **REDIAL Key** – Redials the last number dialed
15. **[VOL] Key** – Key steps through the three available handset volume levels [Normal-Medium-High]
16. **Message Waiting Light** – Also a programmable memory key.
17. **[PAUSE] Key*** - Hidden key inserts a 3.6 second pause in stored numbers.
18. **[HOLD] Key** – Places a caller on hold, press again to return to call.
19. **[STORE] Key*** - Hidden key for storing numbers to Memory keys.

Getting Started

Installation

- 1.** Located on the left side of the phone is a modular jack, insert one end of the coiled handset cord into this jack (you will hear the coil cord click when properly inserted).
- 2.** Insert the other end of the coiled handset cord into the modular jack on the handset.
- 3.** Turn the telephone so the back is facing you. Insert either end of the line cord into the jack on the back of the telephone, labeled “TO TEL”.
- 4.** Insert the other end of the line cord into the telephone outlet.

Warning:

The Bittel Deluxe 5 and Deluxe 10 Hospitality Telephones may only be connected to extension ports of a PBX.

Beware that the handpiece may retain dangerous objects in the earcap region.

It is not recommended to use this telephone in a lightning storm.

Features / Operation

To place a call

Confirm dial tone after lifting handset. Dial the desired number or press one touch memory key. Hang up the handset to terminate the call.

Redial Key

Press after lifting handset to redial last number dialed or press after dialing number to automatically redial without replacing handset.

Message Wait Key

If the message wait key is lit, press to receive messages. (Message wait code must first be programmed – see “Programming Memory Keys”).

Data Port

Located on the back of the telephone is a modular outlet for the connection of laptop computers or other devices.

Flash key

The flash key is used to transfer calls to another extension. When already on a call press Flash, wait for new dial tone and dial extension number. Hang up to complete transfer or if busy press flash again to return to original call

Pause key

Use pause when programming memory keys for external numbers. Enter pause between the line access code and the external number

Memory Keys

Programmable for one touch dialing of frequently used numbers or special features such as outside line, reception, etc.

Programming Memory Keys

To program memory keys, including message wait key:

- Carefully remove plastic and paper labels to expose hidden store and pause keys
- Pick up Handset
- Press Store
- Enter number
- Press Store
- Press memory key
- Hang up